

This standard operating procedure supersedes all previous procedures related to this topic.


PURPOSE The purpose of this procedure is to provide the correct and safest method for the installing and removal of Flexi360 Guide Posts.

SCOPE The scope of work covers manually installing and removal of - Flexi360 Guide Posts into the ground using the Roadside Products recommended installation tools .

BEFORE YOU BEGIN The approved equipment for installing this type of post is the FPD1700 – Flexi360 Manual driver. *Refer to Diagrams*

SAFETY EQUIPMENT Roadside Products recommends the use of Australian Standard approved personal protective equipment when installing our products, i.e.

While Installing Posts on the roadside, Roadside Products recommends facing the oncoming traffic and the following instructions are based on that position.

PPE	(✓)	
Eye protection	<input checked="" type="checkbox"/>	
Hearing protection	<input checked="" type="checkbox"/>	
Gloves	<input checked="" type="checkbox"/>	
Covered footwear steel cap	<input checked="" type="checkbox"/>	
High visual clothing	<input checked="" type="checkbox"/>	

FPD1700 – Flexi360 Manual Driver



STEP 1



Remove slide retaining clip from driver body

STEP 2



Turn Driver upside down and remove R clip. Slide picket foot into driver.

STEP 3



Insert retaining clip into the driver

STEP 4



Manouvere the picket and Driver into the installation position

STEP 5



Now using two hands , drive the picket

STEP 6



Drive picket to ground level

STEP 7



Remove retaining clip

STEP 8



Remove driver from picket

STEP 9



Install post onto picket

STEP 10



Using the supplied crimping tool crimp the end tag on the acceptor plate

STEP 10



STEP 11



Installation complete

STEP 1



Using the supplied crimping tool uncrimp the end tag on the acceptor plate

STEP 2



Remove post from picket foot

STEP 3



STEP 4



Manouvere the picket and Driver onto the picket foot

STEP 4



STEP 5



Replace the retaining clip

STEP 6




Now using two hands , remove the picket

STEP 7



Remove retaining clip

STEP 8

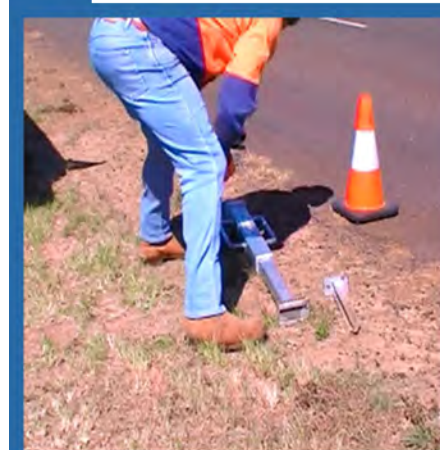

Remove driver from picket